


ISO 13936-1 and Similar Seam Slippage Tests – Correct Clamping of Two-Part Specimens

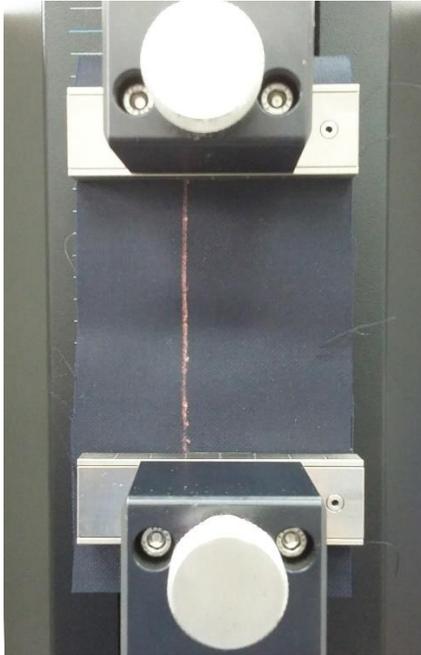


UNSEAMED SPECIMEN

Ensure the 25 mm x 25 mm Jaw Faces are fitted to both top and bottom grips.

Align the 38 mm mark with the edge of the top 25 mm x 25 mm Jaw Faces.


Close the top grip.

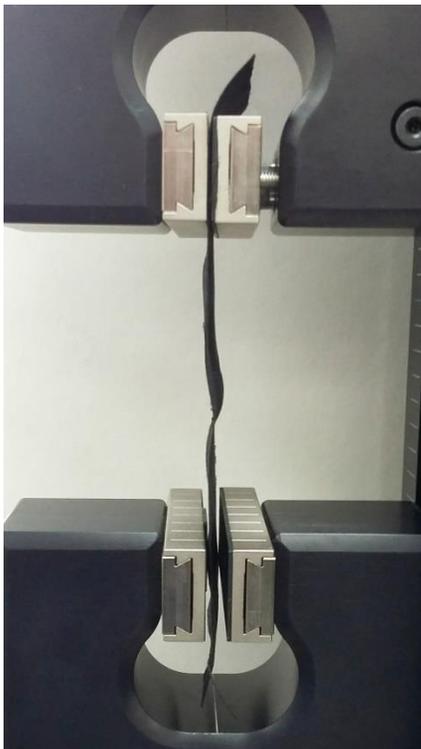

To permit the specimen to be slack mounted it must not be in contact with the body of the Grip. It should be suspended and hanging under its own weight only.

DO NOT pull the specimen or pretension it in any way.


Close the bottom grip.

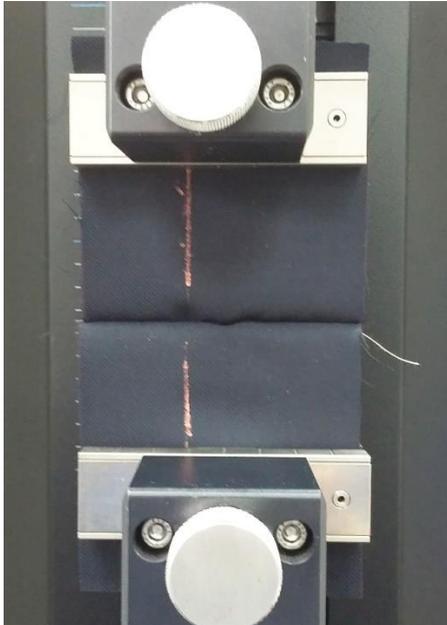

UNSEAMED (SEWN) SPECIMEN

Align the 38 mm mark with the edge of the top 25 mm x 25 mm Jaw Faces.

Close the top grip.

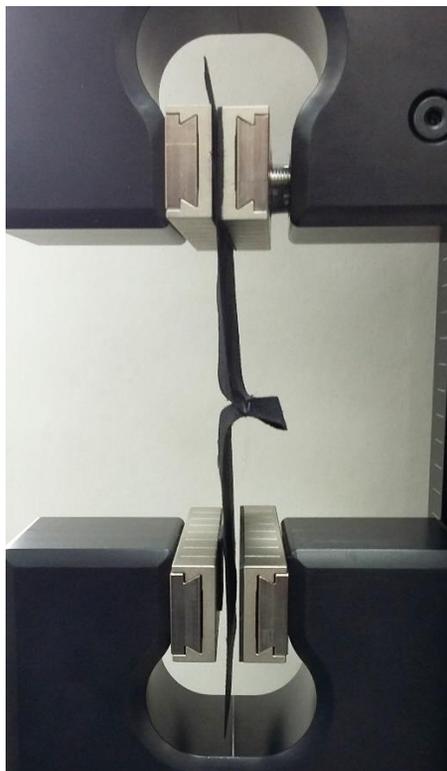

To permit the specimen to be slack mounted it must not be in contact with the body of the Grip. It should be suspended and hanging under its own weight only.

DO NOT pull the specimen or pretension it in any way.

Close the bottom grip.